



TAURUS

ANDROID SMART POC RADIO

Metal Frame

Instruction Manual - TR104




Product Brief

Thank you very much for purchasing this POC radio. This machine has dual SIM cards and dual standby, powerful functions, stable performance, low power consumption and provide real-time communication to you.

In order to make this product work at its best. Please read this manual carefully before use. The picture used in this manual are only functional diagrams and may different from the actual product. Please refer to the actual product.

Feature Guide

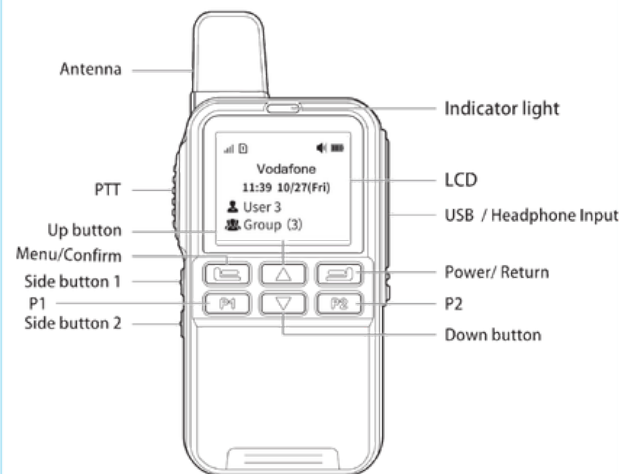

- 1 -

Key Operation

Power button:

Long press: Power on/off function.

Short press on standby for screen activation, and in the secondary menu, short press to return and exit.

Up/ Down keys:

Used for navigation and adjusting volume.

Menu/Confirm key:

In the standby page, it open the menu page; within page, it serves as the confirm/ select key.

P1: Short press for quick entry into group selection.

P2: Short press for quick entry into member selection.

PTT Key:

In Standby mode, press to speak, release to return to standby.

Side key1:

Short press for voice announcement of the current group name;

Long press for voice announcement of the current account, group name, and current battery level.

Side Key2:


Short press voice announcement of the current battery level.

***Side Key 1, Side Key 2, P1, P2, and power on/off key functions support customization by the writing software.**

- 2 -

Interface

Standby Page

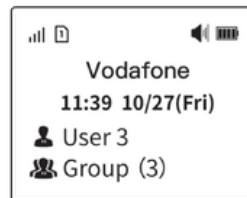

Vodafone

11:39 10/27(Fri)

Indicate the current network mode;

Display SIM card status;

Show current volume level;

Show battery level;

User name of this device;

Current group;

Display current network operator name;

Show current time, date and days;

Menu Page

1. Group Selection

After choosing the corresponding group, press the "Menu Key" to confirm the selection.

2. Member Selection

After selecting the corresponding member, press the "Menu Key" to confirm selection.

3. Setting

(1). **Voice Announcement:** Enable or disable voice announcements.

- 3 -

(2). Backlight Settings:

- Backlight Control (Constant, 5 seconds auto, 10 seconds auto, 15 seconds auto, 20 seconds auto, 25 seconds auto, 30 seconds auto);

- Call Backlight Control (Enable, Disable backlight during calls);

(3). **Themes:** Choose from 5 background themes;

(4). **BEEP Sound Settings:** Enable or disable BEEP sound;

(5). **Scene Mode:**

Switch between Outdoor, Standard, Indoor, and Headset modes;

(6). **Microphone Mode:**

Switch between Low, Medium, and High microphone sensitivity;

(7). Power Saving Configuration:

- Power Saving Level (High Performance, Standard, Super Power Saving);

- Sleep Mode (Enable, Disable);

(8). **SIM Card Selection:** Manually select SIM1 or SIM2;

(9). **SIM Card Auto Switch:** Enable or disable;

(10). **Call Prompt Sound:** Enable or disable call prompt sound;

(11). **Headset Recognition:** Manual, automatic mode switch.

(12). **Device Information:**

Software Version: Check software version number.

Module Version: Check module version number.

IMEI: Check IMEI number.

ICCID: Check internet card ICCID number.

App Version: Check application version number.

- 4 -

Technical Specifications

Voltage	3.7V	
Operating Frequency	FDD LTE	B1
		B3
		B5
		B7
		B8
	TDD LTE	B20
		B28
		B38
		B40
		B41
Dimensions	122x53x23mm (include Antenna)	
Weight (including battery)	168g	
Temperature Range(OP)	-20°C ~ +60°C	
Temperature Range(ST)	-30°C ~ +80°C	
Operating Mode	Half Duplex	
Transmit Power	≤23dBm±2.7dB	
Receiver Sensitivity	≤108dBm	
Audio Output Power	500mW	

* Due to ongoing technological advancements, the above data is subject to change without further notice.

- 5 -

Setting Up

When using the battery pack with the host for the first time, a low battery warning may occur. Please charge the battery before use.

Charging Methods: Charge the entire device or charge individual battery packs.

▲ **Note:** Please use the original charger. Otherwise, the battery pack may be damaged or even cause explosions.

Confirm that the charging terminals of the battery pack are in normal contact with the USB power cable.

The indicator light on the bottom of the battery pack displays as follows:

Solid red light: Charging in progress

Solid green light: Fully charged

Installing/Removing the Battery Pack

* Align the positive and negative terminals of the battery pack with the device, push up firmly until you hear a "click" sound, indicating that the battery pack is securely in place.

-To remove the battery pack, first turn off the walkie-talkie, then push up the battery latch at the bottom of the walkie-talkie to release the battery pack.

Installing/Removing the Belt Clip

* Align the two screw holes on the belt clip with the two screw holes on the back of the walkie-talkie. Attach the screws and tighten them with a screwdriver.

* To remove the belt clip, use a screwdriver to loosen the screws and take off the belt clip.

Installing the UIM Card

Remove the walkie-talkie battery, open the card slot cover, insert the UIM card into the slot, and then close the card slot cover.

(Note the direction of the UIM card notch.)

- 6 -

Safety Warning and Precautions

Safety Information:

If the product is lost or stolen, please report the loss of the SIM card according to the regulations of the service provider.

To prevent misuse of your walkie-talkie, please handle it with care.

Please use the walkie-talkie correctly and ensure that the SIM card is installed correctly.

Battery Usage Precautions:

- Do not place the device in high temperatures or throw it into fire to avoid battery explosions.
- If the device is not used for an extended period, discharge the battery and store it in a dry, shaded, and cool place.
- Stop using the battery pack if it swells or the charger shows signs of aging.
- Return the used battery pack to the dealer or place it in designated recycling points, and do not dispose of it in household waste.
- If the battery pack is broken, avoid contact with the substances inside.
- If it comes into contact with the skin, rinse with plenty of water, and seek medical help if necessary.

Charger Usage Precautions:

- To improve charging efficiency and ensure safety, use a 220V AC power source.
- Avoid short-circuiting the charger to prevent electric shock, smoke, and damage to the charger.
- Do not use the charger with damaged power cords, as it may cause fires or electric shocks.
- Clean the dust accumulated on the power socket promptly.
- Do not place containers filled with water or other liquids near the charger to prevent water splashes, which may cause electrical leakage and malfunctions.
- Do not disassemble or modify the charger, as it may result in personal injury, electric shock, fire, or charger damage.

- 7 -

- Do not use the charger in high-humidity areas such as bathrooms, as it may result in electric shock, fire, or damage to the charger.
- Avoid touching the charger, battery pack, or power socket with wet hands, as it may lead to electric shock.
- Do not place heavy objects on the power cord or attempt to modify the power cord, as it may cause electric shock or fire.

The device should not be used in overheated environments.

Please use the original 5V1A charger to charge the device to avoid damage.

- Strictly prohibit the use of high-power chargers for charging (e.g., 12V5A).

If the device accidentally gets wet, promptly remove the battery pack and stop using the device to prevent potential safety hazards.

Unboxing Inspection

Please unpack the walkie-talkie from the packaging box and verify whether the items listed in the table below are complete. If any items are lost or damaged during transportation, please contact the dealer promptly.

Package List

Items	Qty
TR104	1
Battery Pack	1
Power Adpter	1
USB Power Cable	1
Belt Clip	1
Lanyard	1
User Manual	1

- 8 -

Warranty Card

We sincerely thank you for choosing our company's product!

To enhance your experience with this product, our company provides the following services:

1. This product comes with a one-year free warranty from the date of sale (based on the invoice), with a 6-month free warranty for the battery. Other accessories provided are not covered by the warranty.

2. Damages caused by reasons such as exceeding the warranty period, human factors, natural causes, or improper use are not covered by the free warranty. Our company provides paid repair services for such cases.

3. The warranty card and purchase invoice serve as the sole proof for warranty services for this product. Lost documents will not be replaced, so please keep them securely



Taurus brand, logo, and designs are the property of Nemer Enterprises s.a.r.l.
www.nemerenterprises.com